


メニューについて(つづき)

メニューなどの表示言語を選ぶ

■ メニューなどの画面表示を日本語にするか英語にするか選ぶことができます。

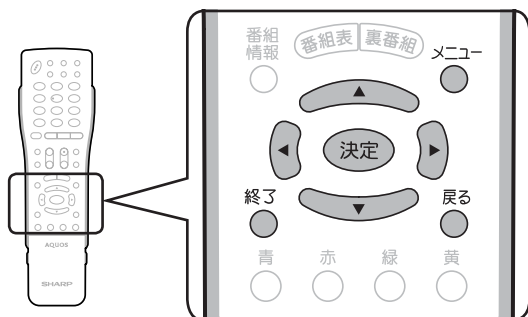


[例] 表示言語を英語にする

1 メニュー画面から「本体設定」→「Language(言語設定)」を選び、「決定」を押す



2 で「English」を選び、「決定」を押す

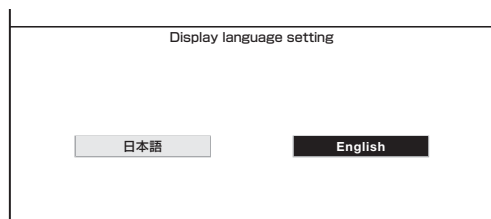

・ 画面表示が英語になります。

操作終了する場合は

メニュー または 終了 を押し、通常画面に戻す
・ 1つ前に戻る場合は 戻る を押してください。

Switching the Display Language to English

■ Using the menu screen, you can switch the on-screen display language to English.


1 ① Press **メニュー** (menu) to display the menu screen.
② Press **決定** to select “本体設定” (Setup).



2 Press **決定** to select “Language (言語設定)”, then press **決定** (enter).



3 Press **決定** to select “English”, then press **決定** (enter).

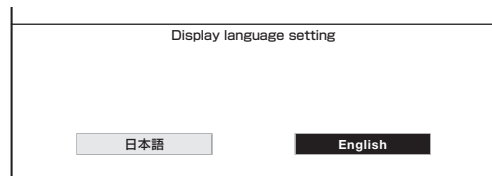


・ The menu screen is now displayed in English.

To finish this operation


Press **メニュー** (menu) or **終了** (finish) to return to normal screen.

・ Press **戻る** to return to the previous screen.


Part Names – Main Unit

■ The number shown in each  is the page number where the part's function and/or use are explained either in English or Japanese.


Front view

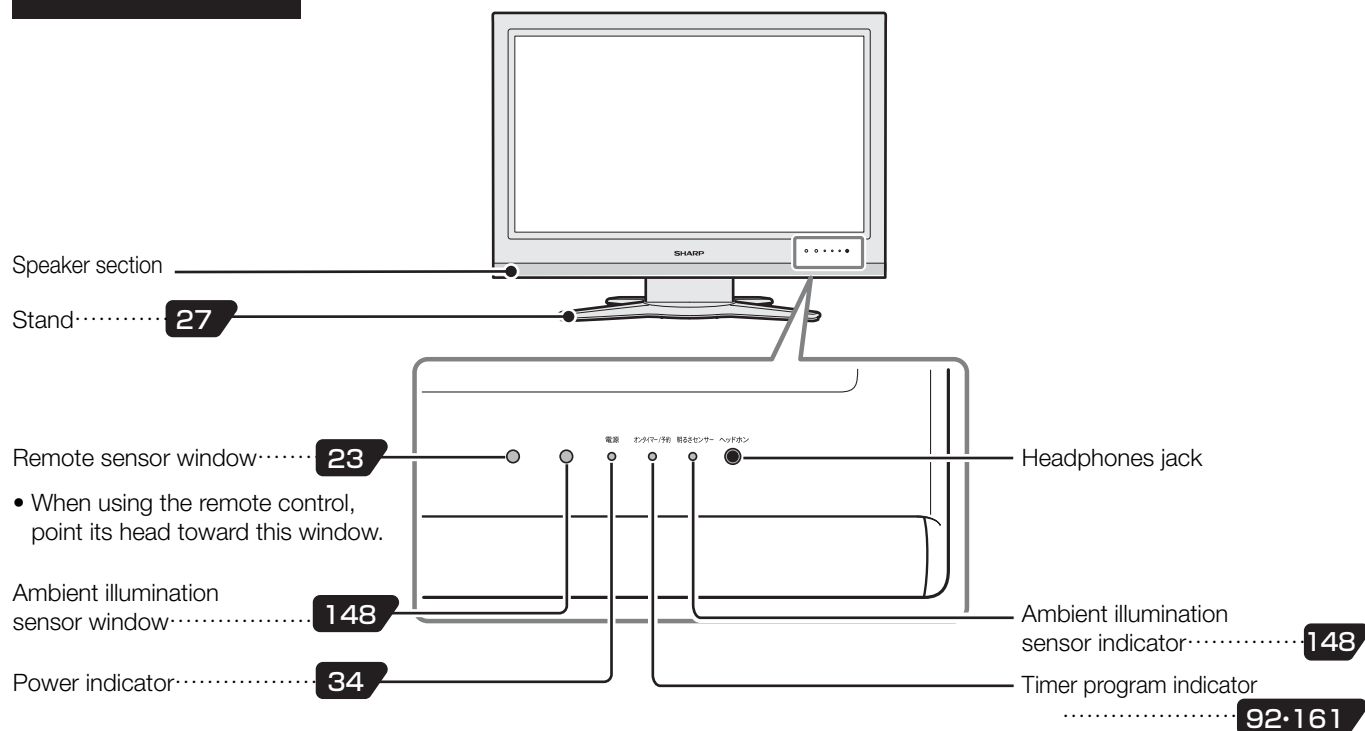


Top view

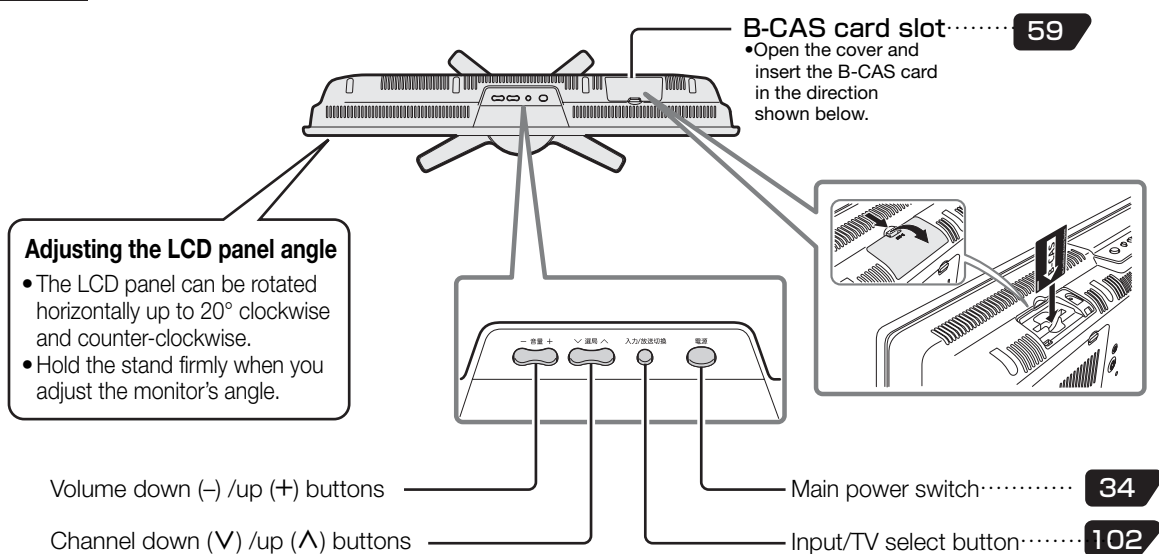

Rear view

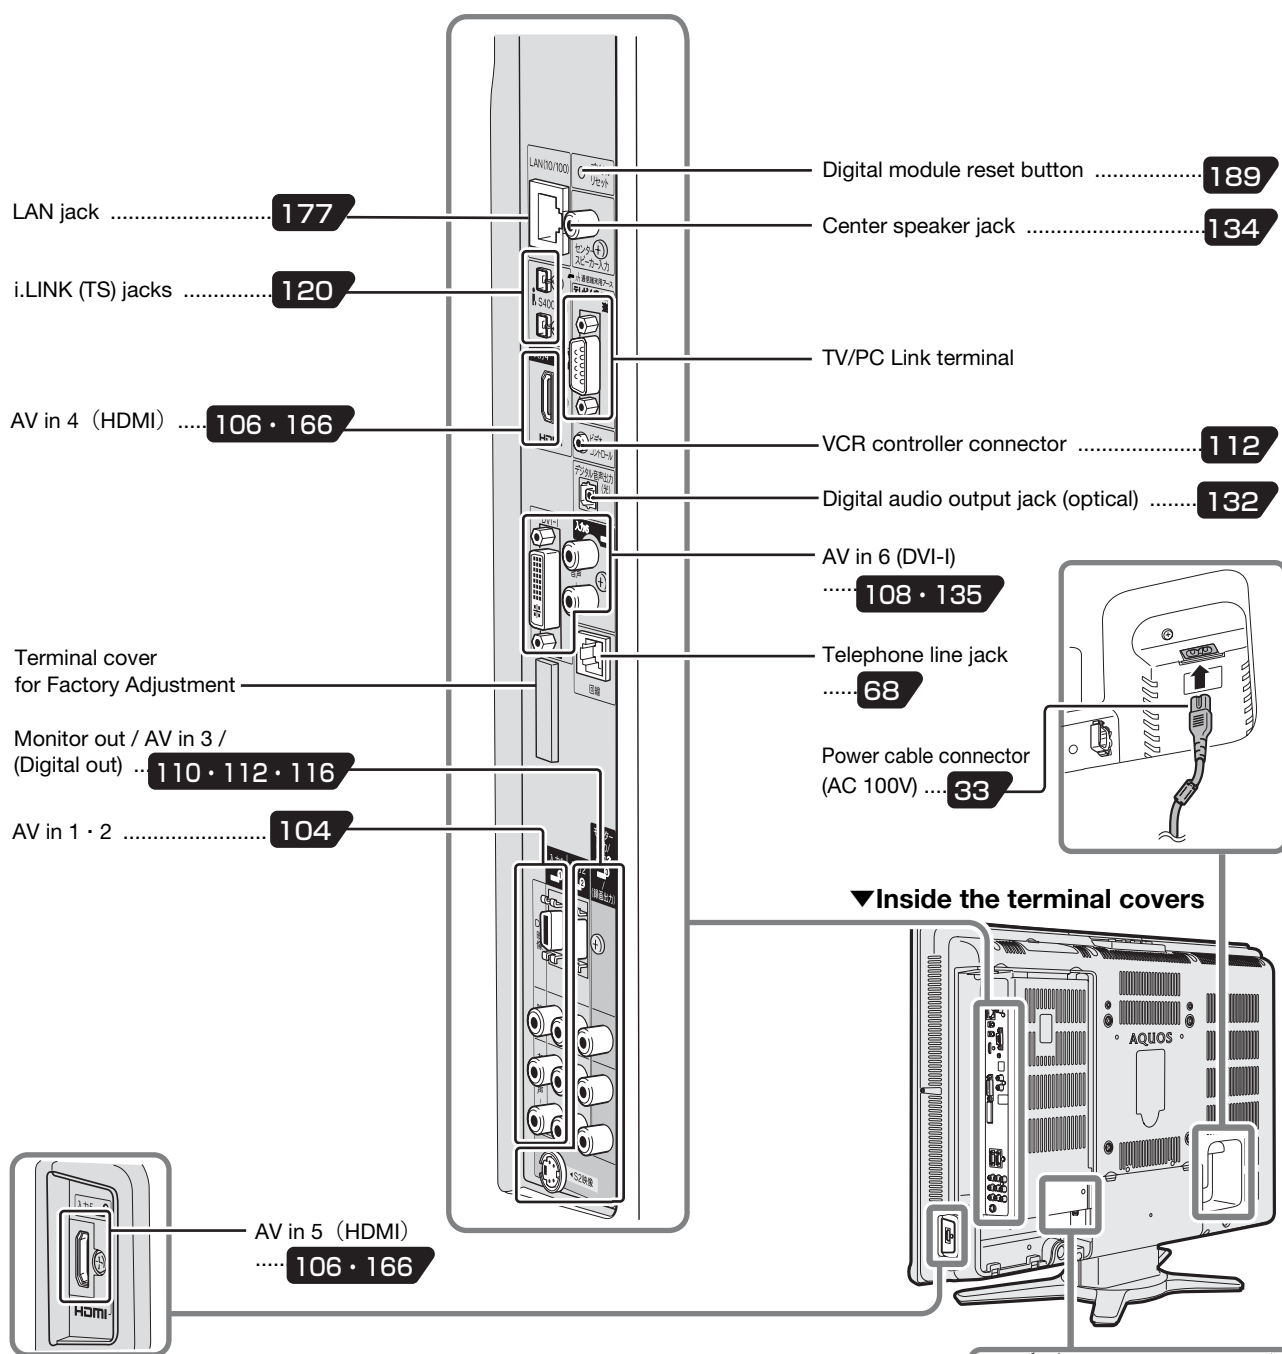

Opening the terminal cover

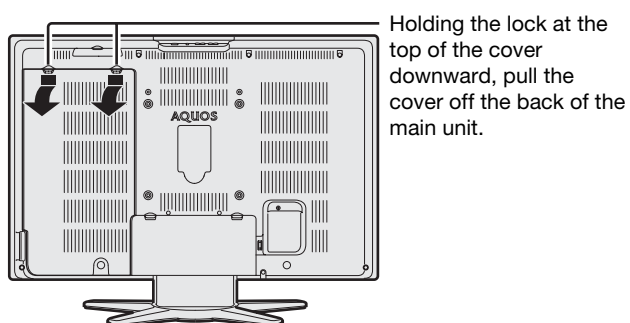


BS/CS 110 antenna input terminal 32

VHF/UHF antenna input terminal 31

Part Names – Remote Control Unit

Cover closed

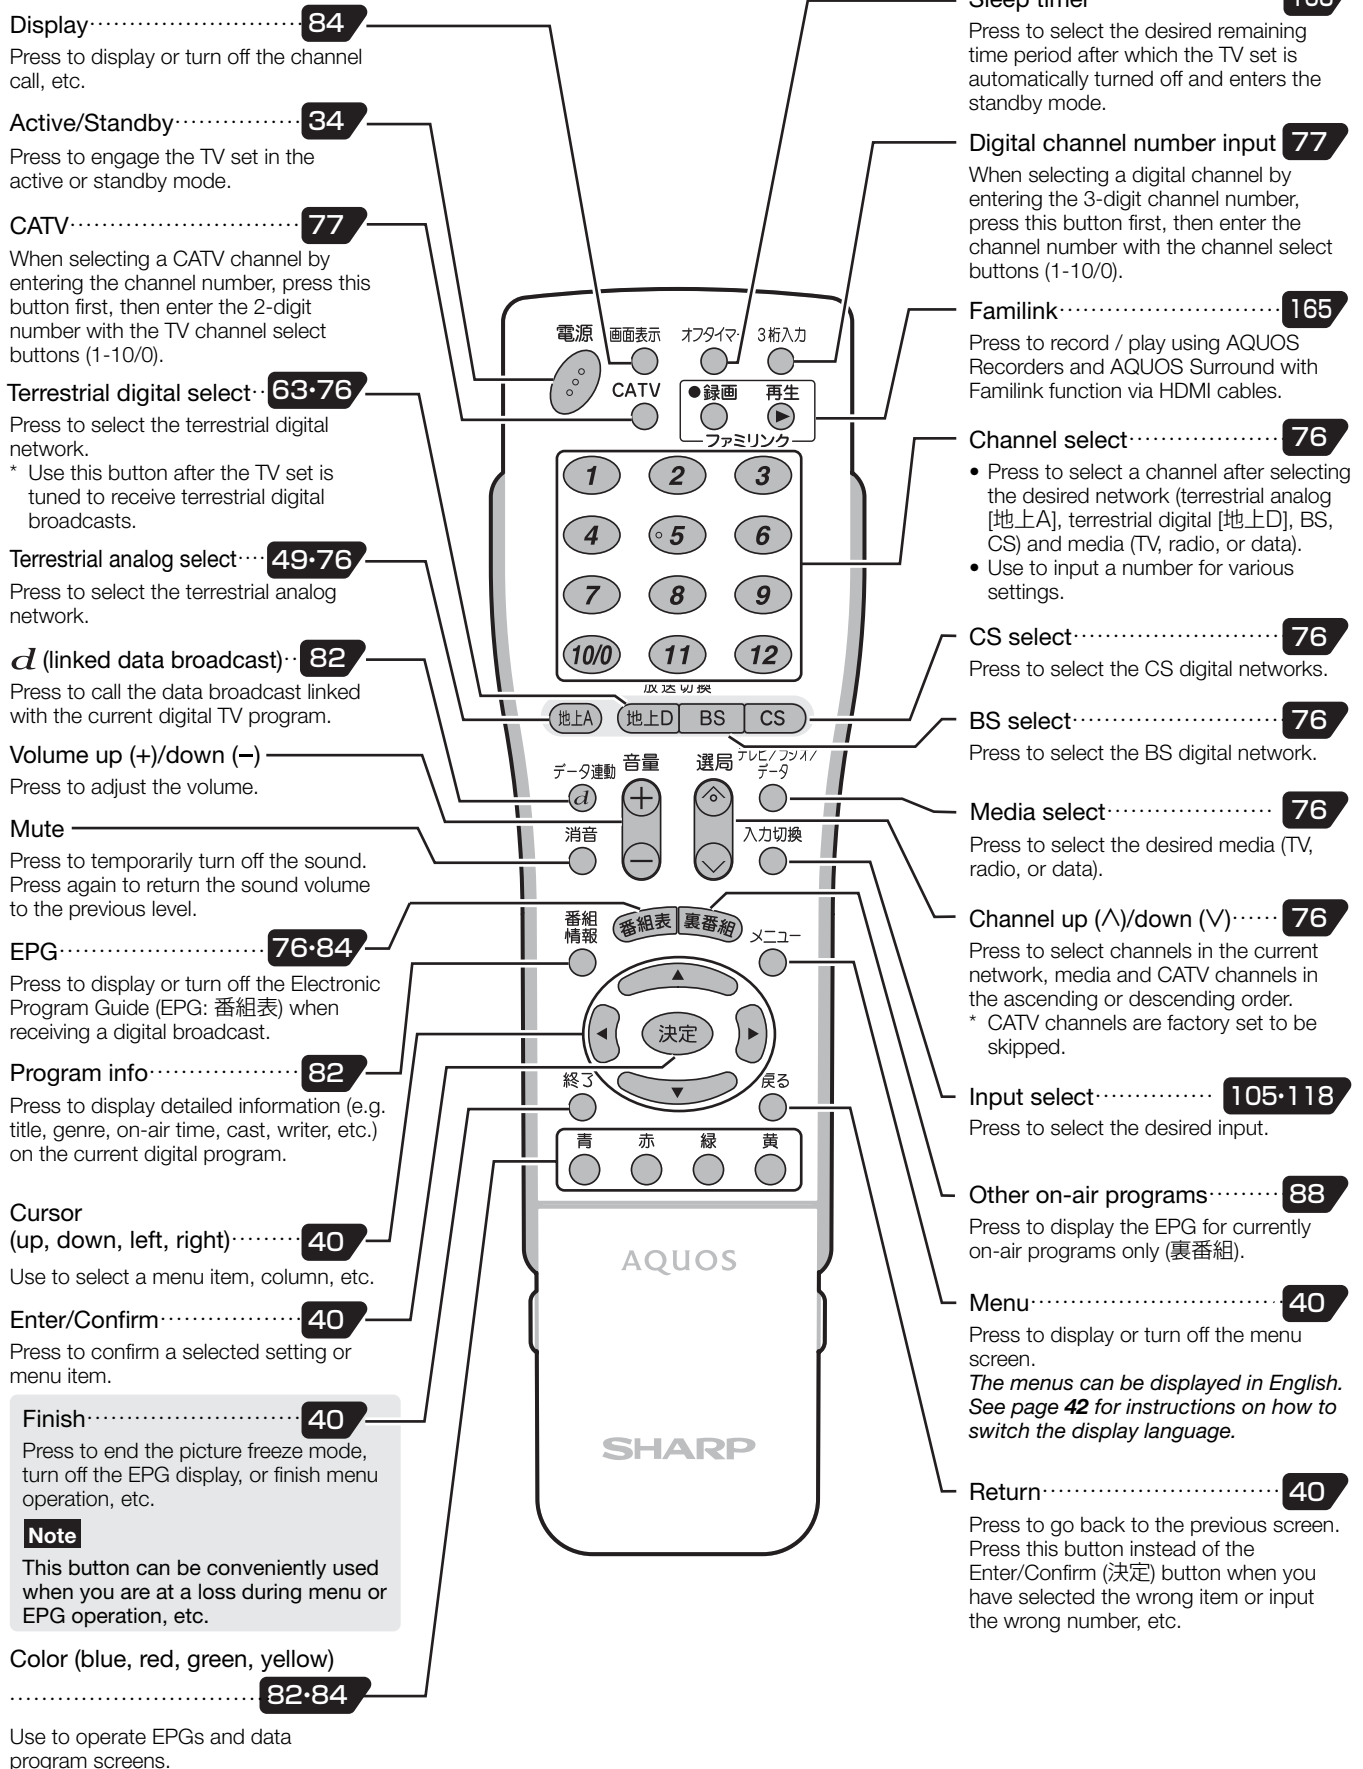

Cover open

Picture select..... 81

Press to select the desired picture when watching a digital multi-picture program.

Screen mode..... 137-143

Press to select the desired screen mode.

Freeze..... 155

Press to freeze the picture.

AV mode select..... 147

Press to select the picture/sound setting (dynamic [locked], dynamic, standard, cinema, game, or AV memory) that best matches the current program.

i.LINK..... 121-124

Press to select the i.LINK mode. Press to display or turn off the D-VHS VCR, AV-HDD recorder, Blu-ray Disc recorder or Hi-Vision Video camera control panel.

Favorite channel select/register..... 77-156

Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

Familink..... 165

Press to operate AQUOS Recorders and AQUOS Surround with Familink function via HDMI cables.

Caption..... 173

Press to display, select, or turn off captions when watching a digital program with captions.

Audio select..... 81-152

Press to select the desired audio (e.g. Japanese or English in bilingual broadcast, the main sound or a sub sound in digital multi-sound broadcast, etc.).

Operable screen..... 154


Press to switch the operable screen (screen with the ♪ mark) when the TV set is in the split screen mode.

Split screen..... 154


Press to switch between the split screen mode and the normal screen mode.

To open the cover

Hold the cover by the projections on both sides and lift upwards.

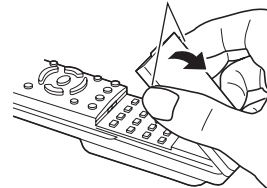

Basic operation for channel selection

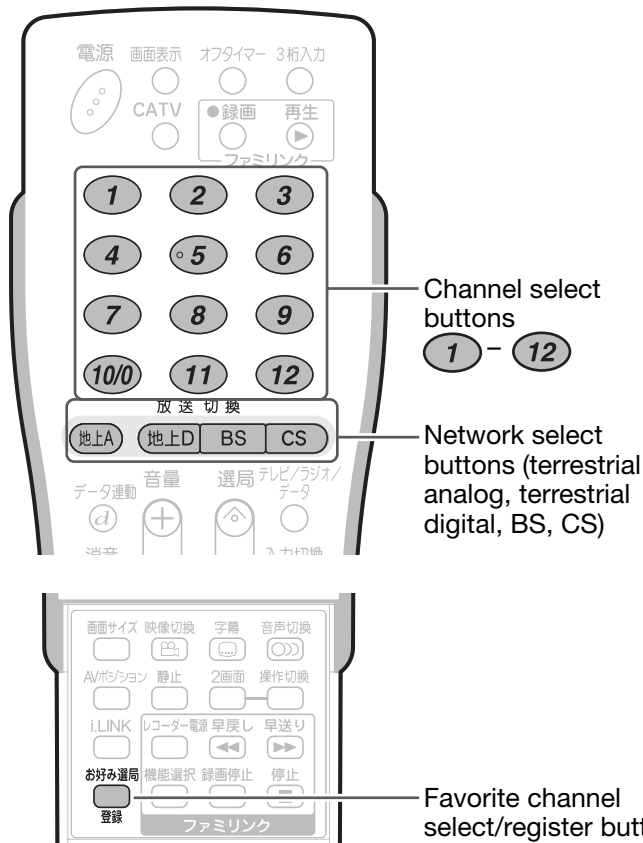

Selecting terrestrial analog (VHF/UHF) channels

- ① Press **地上A** to select terrestrial analog broadcast.
- ② Press **1** - **12** to select the desired channel.

Selecting digital channels

- ① Press **地上D**, **BS** or **CS** to select the desired digital broadcast network.
- ② Press **1** - **12** to select the desired channel.

Types of broadcast

- **地上A** Terrestrial analog: Conventional VHF/UHF broadcast
- **地上D** Terrestrial digital: Terrestrial digital broadcast
- **BS** BS: BS digital broadcast
- **CS** CS: CS 110 digital broadcast

■ For details about channel selection, see page 76.

Selecting favorite channels

- ① Press **お好み選局** to display the registered channel screen.
- ② Press **1** - **12** to select the desired channel.